


WIRELESS 8-GANG SWITCH PANEL INSTALLATION GUIDE


!!! READ BEFORE INSTALLATION !!!

**FAILURE TO FOLLOW THE INSTRUCTIONS CAN RESULT IN DAMAGE TO
THE PRODUCT AND VOIDING OF WARRANTY**

Read all instructions before installing the product. For detailed instructions and videos, visit
<https://rhinoledlights.com/pages/help/install>

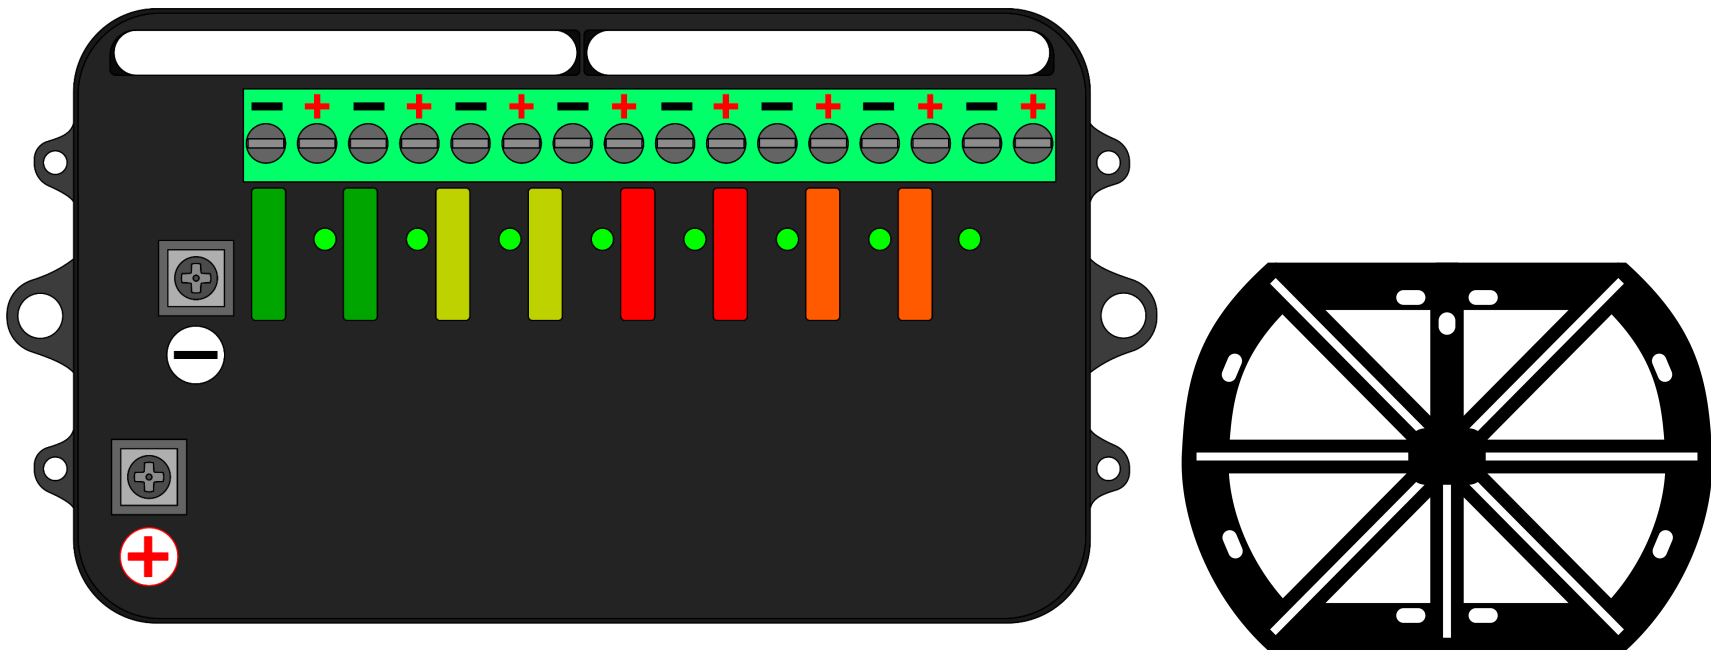

TO CONNECT WIRELESS REMOTE

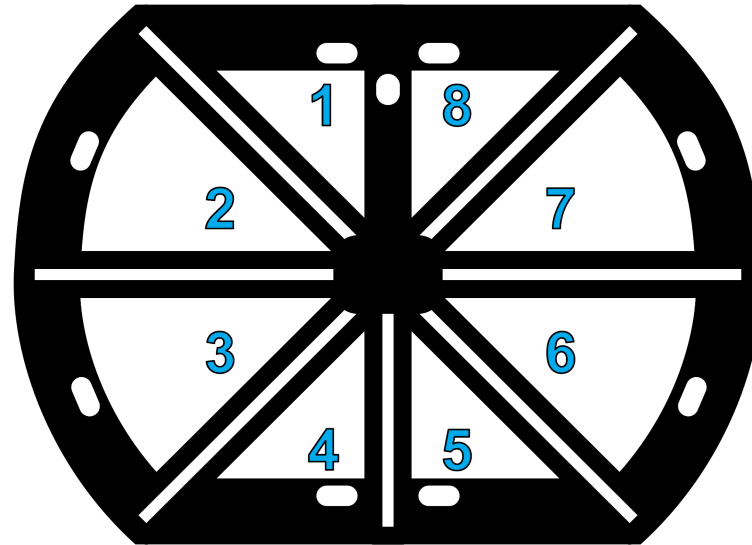

Within 1 minute of powering on control box:

Press key # **5** on wireless remote (as shown on the diagram above) **5 times**. When the 5th indicator light flashes gold, the controller is connected.

To turn all lights (channels 1-8) on/off at once:

Press the Middle Button (between 1 and 8)

To turn the backlight on/off:

Press and hold the Middle Button

This wireless switch panel allows control over 8 groups of LED lights together, with 4 different color coded fuse circuits:

30A - 2 channels (green)

20A - 2 channels (yellow)

10A - 2 channels (red)

5A - 2 channels (orange)

PLEASE NOTE:

Do not exceed the stated current rating for each channel
Overall current draw maximum - **80A**


CHARGING THE WIRELESS REMOTE:

Connect via USB-C

Battery: 300mAh

Standby Time: 1000h

Installation Instructions:

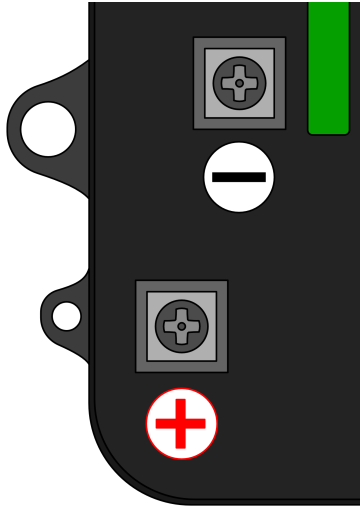

Undo 4 screws around control box and lift to remove the cover.

Connect positive (+) and negative (-) leads of circuit breaker to control box and source power.

To connect lights:

Choose the fuse channel that fits the requirements of the lights being connected.

Attach the positive (+) and negative (-) leads of the lights to the corresponding fuse terminal block.

