

RGB HALO WIRING GUIDE

!!! READ BEFORE INSTALLATION !!!

FAILURE TO FOLLOW THE INSTRUCTIONS CAN RESULT IN DAMAGE TO THE PRODUCT AND VOIDING OF WARRANTY

Read all instructions before installing the product. For detailed instructions and videos, visit <https://rhinoledlights.com/pages/help/install>



RGB halo lights must be connected to the included **VOLTAGE REGULATOR**, which is then connected to the bluetooth controller.

DO NOT wire the halo directly to the controller.

Unless specified, only connect **ONE HALO PER VOLTAGE REGULATOR**.

DO NOT connect other components to the voltage regulator.

DO NOT pull/yank on the wire connected to the halo or bend it near the solder joint.

Bending the wire at the solder joint at angles over 60° can potentially cause connection issues and weakening of the solder joint